

# How to log in

1、 <http://IP:7000>


<http://192.168.1.2:7000>

2、 download the software



# Config

1、 Add camera

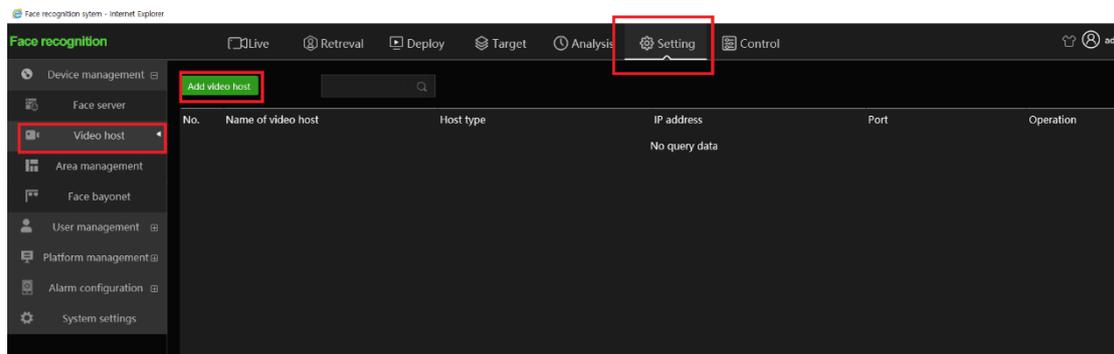

No.	Name of video host	Host type	IP address	Port
1	YKcam	Video host	192.168.1.206	3000

Basic information

\*Name: YKcam

\*Host type: Video host

\*IP: 192.168.1.206

\*Port: 3000

\*Username: admin

\*Password: .....

\*Quantity of cameras: 1

Description:

[Save](#)

Click Save

Face recognition system - Internet Explorer

Face recognition

Live Retrieval Deploy Target Analysis Setting Control

Device management

Face server

Video host

Area management

Face bayonet

User management

Platform management

Alarm configuration

System settings

No.	Name of video host	Host type	IP address	Port	Operation
1	YKcam	Video host	192.168.1.206	3000	

## 2、Add area

Face recognition

Live Retrieval Deploy Target Analysis Setting Control

Device management

Face server

Video host

Area management

Face bayonet

User management

Platform management


Alarm configuration

System settings



Region

Add area



No.	Area name	Description
No query data		

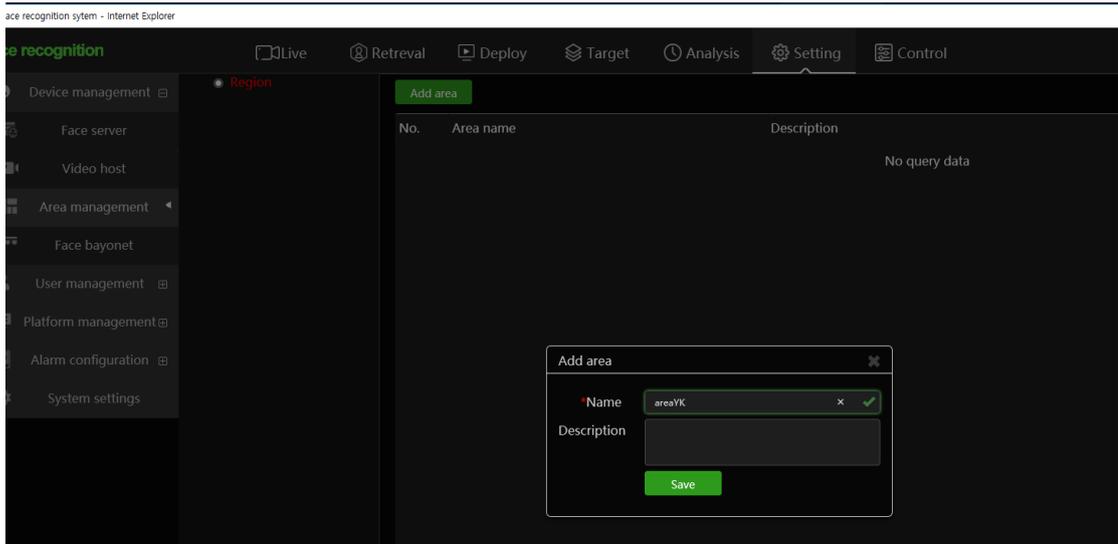


### 3、Add Bayonet

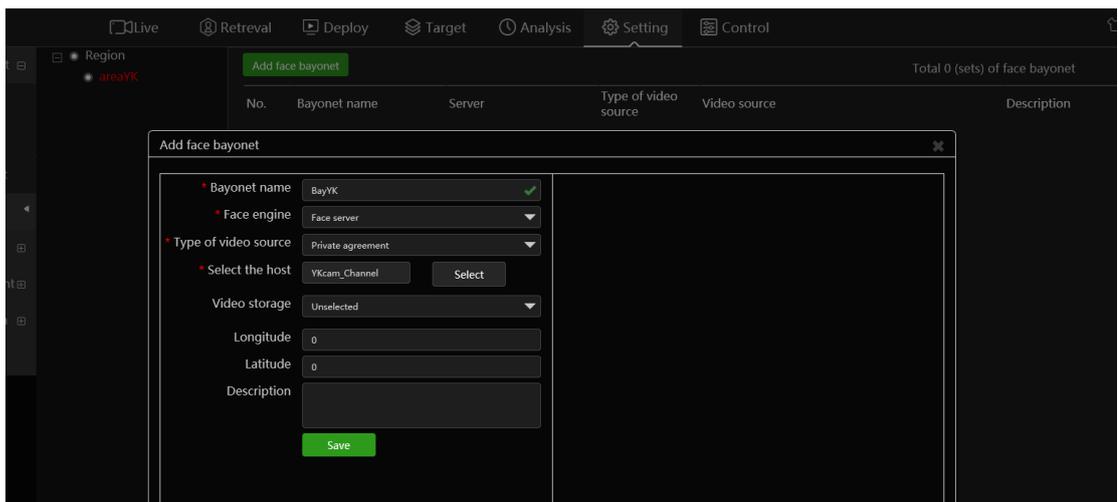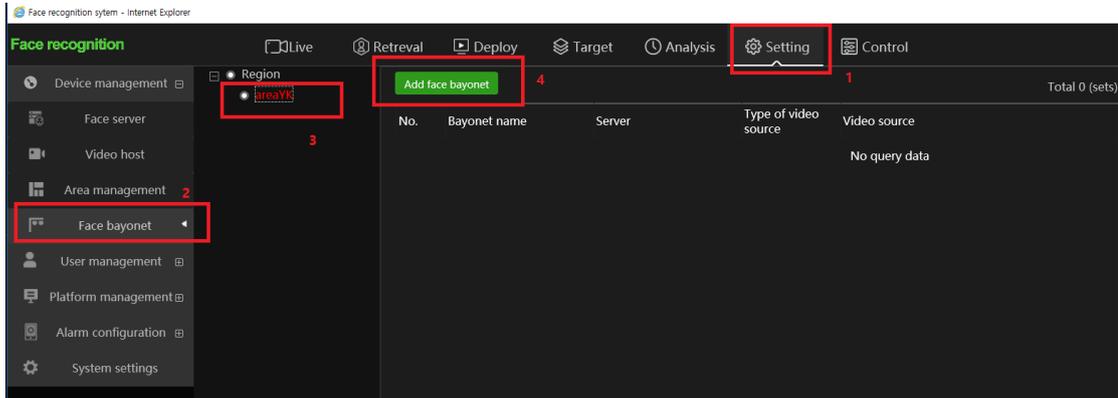

### 4、Add Target

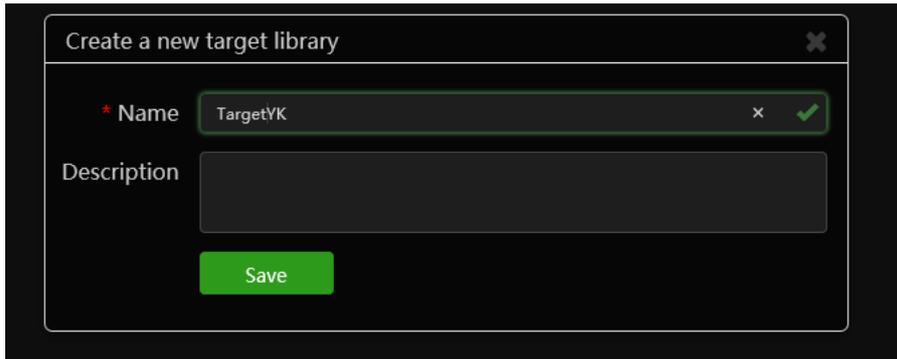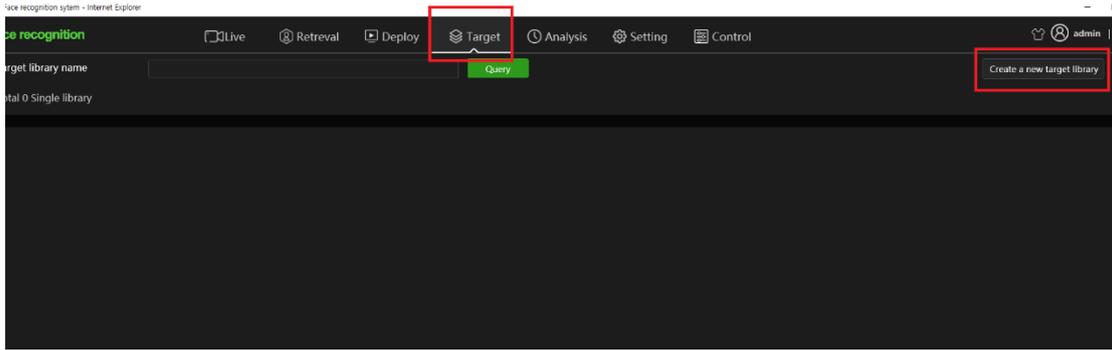




Click save

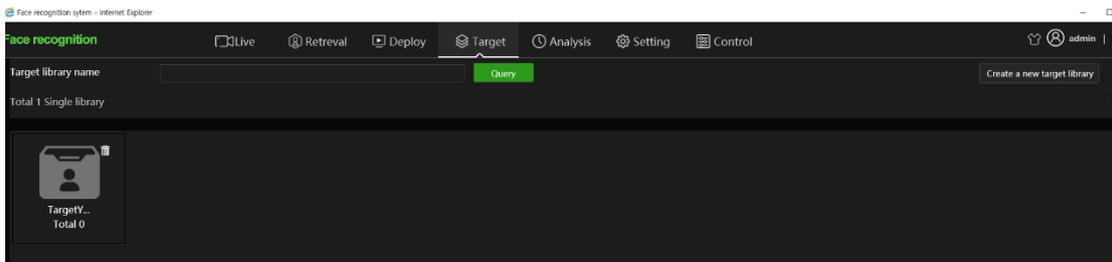


## 5. Add photos

Click the folder


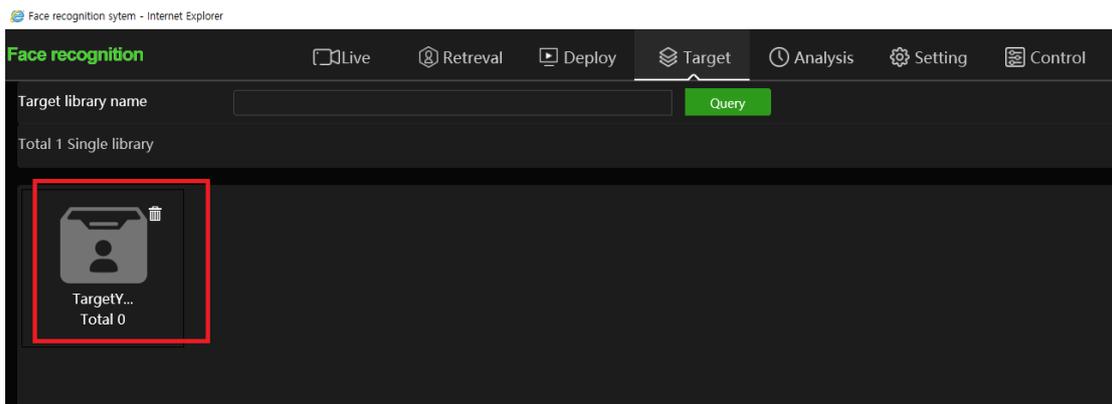


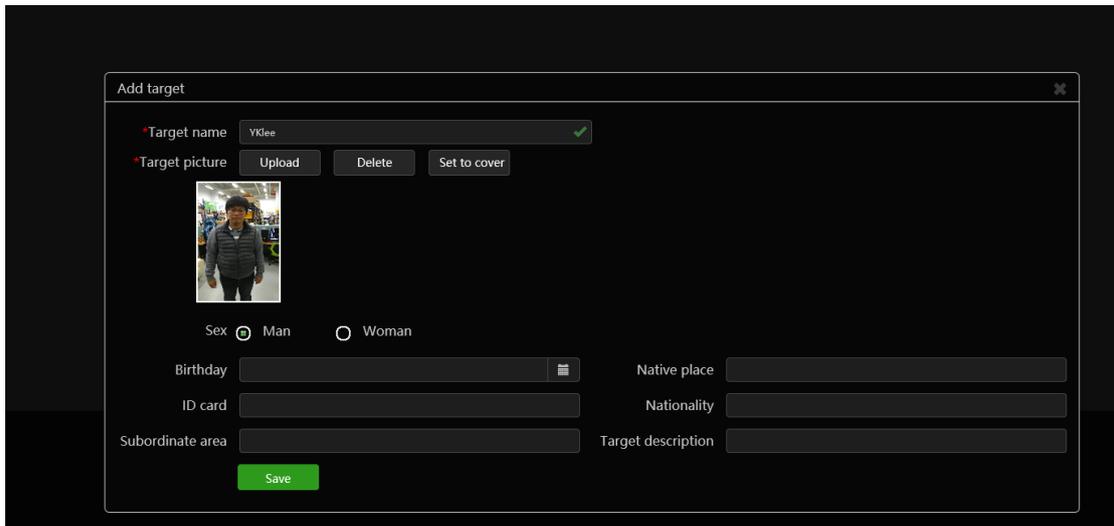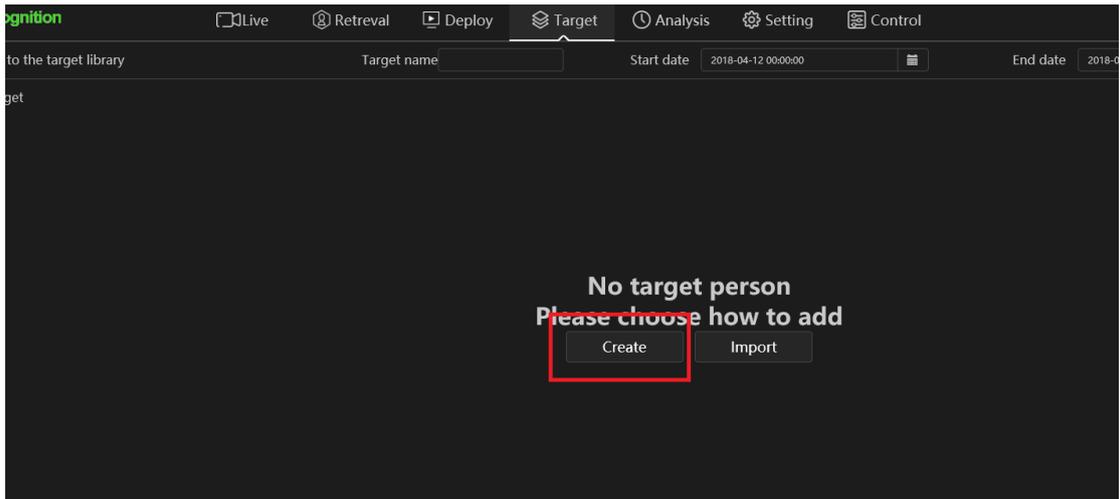



## Add more photos

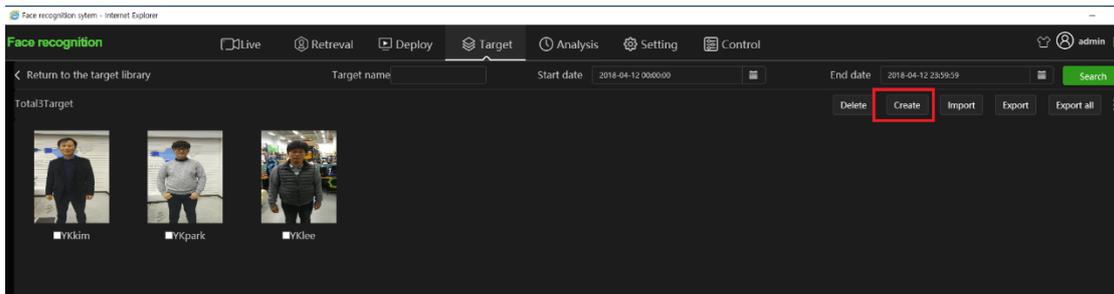


## 6、Deploy-add task

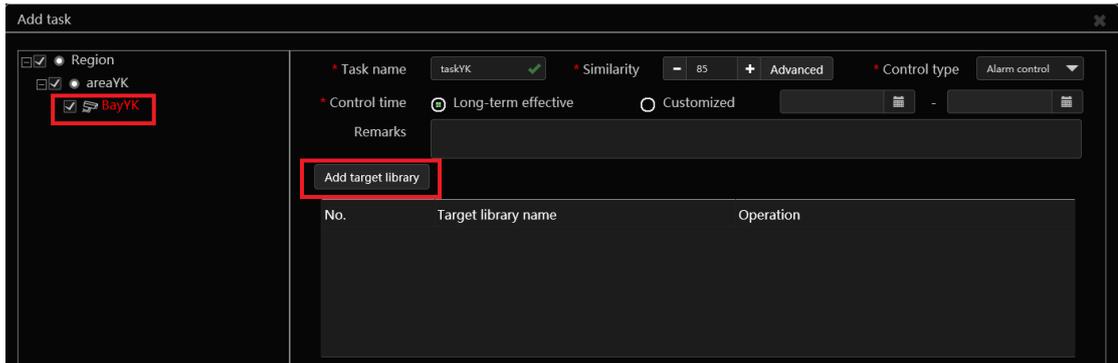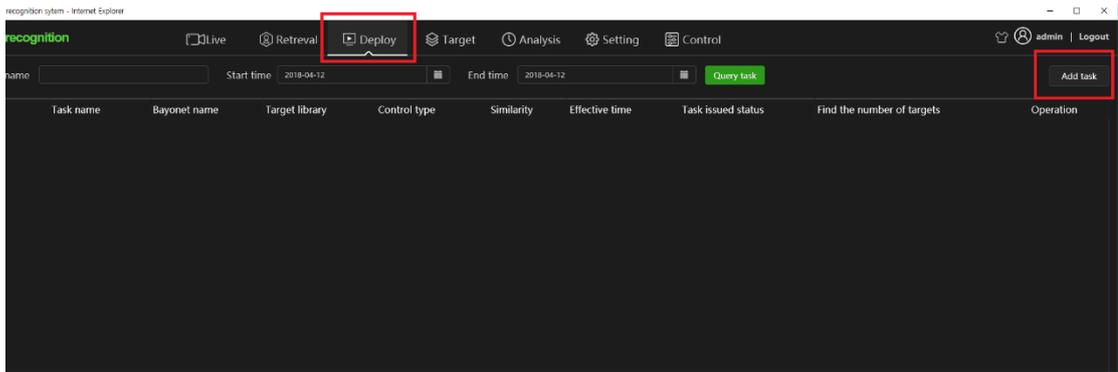

Add target library

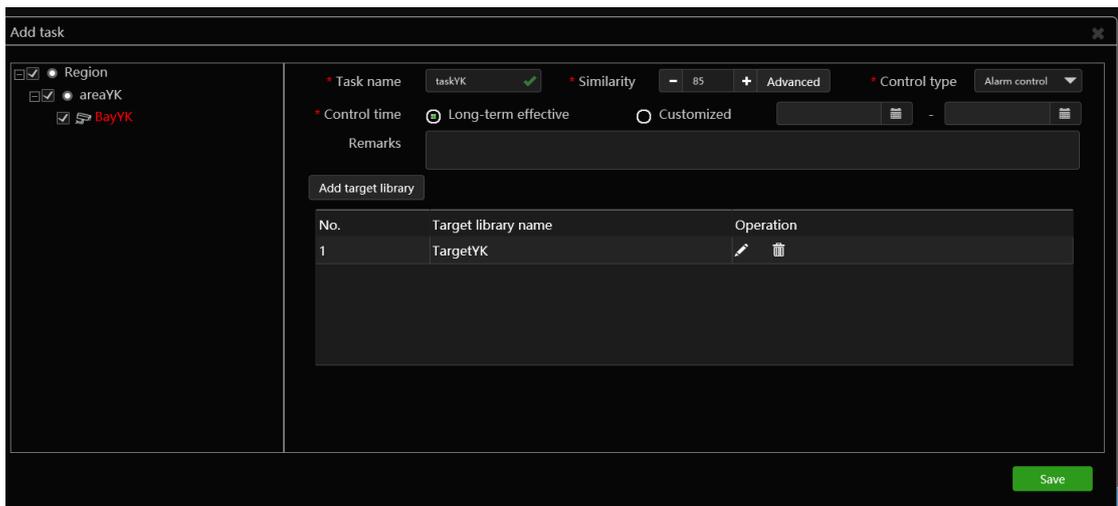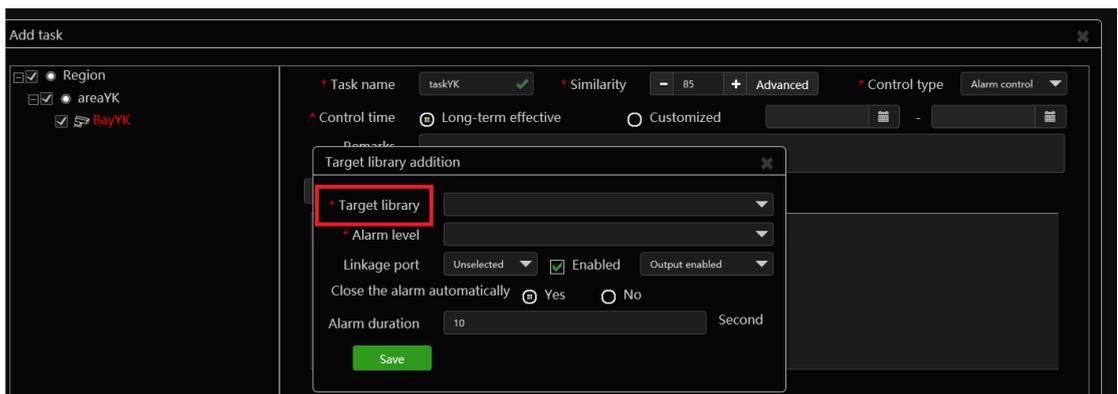

7、live view can see the video

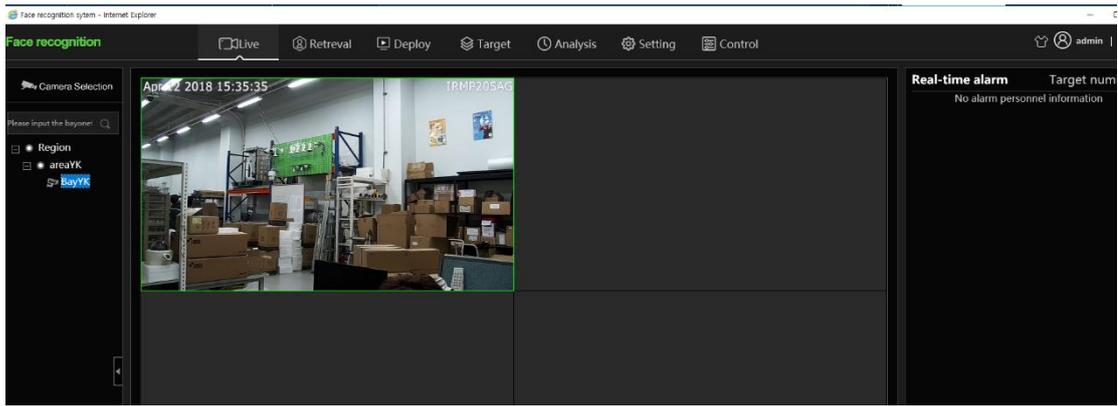

## How to change sever IP

