

1. Set preset (later we will link the preset)

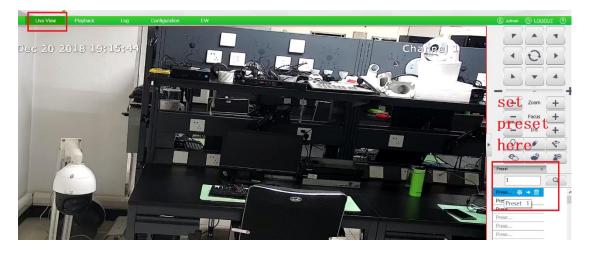

2. Configuration, set alarm link

	Live View	Playback	Log	Configurati	ation EW	
	 Audio Video Set Dome Set VCA 		Aları	n Input	1	
	 OSD Storage Management 			Input Port	ort 1 VEnable 4	
	 Network Management 			_		
	User Management		5	Mode Set	normally open V	
Ľ	Alarm Management 2			Schedule	le Thursday \vee	
	Alarm Input 3				✓ 00:00	
	Motion Alarm					
	Mask Alarm Email Alarm					
	Other Alarms				00:00 ~ 00:00 ~	
	PTZ Management				00:00 🔹 ~ 00:00 🔹	
	Advance Set					
					✓ Sun ✓ Mon ✓ Tue ✓ Wed ✓ Thu ✓ Fri ✓ Sat Apply	
				Link Type	De Link PTZ V	
				Link Channel	el Channel 1 ~ 6	
				Link PTZ Type		
				Number	er 1 ~	
				7	Save Copy to	

3、 When alarm happened you can see alarm and link camera to preset;

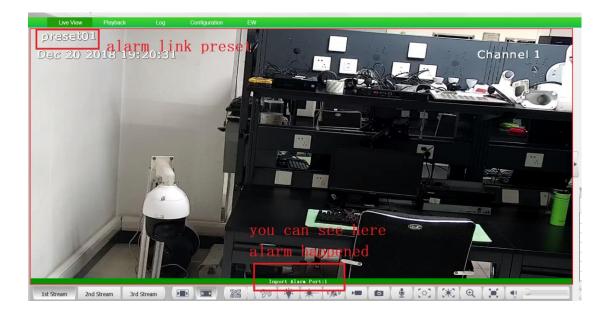

How to make alarm happened?

Short-circuited the alarm in and ground;

